

KEYBAG & KEYCOVER SIZE CHART

KEYBAG
KEYCOVER

MAKE	MODEL		
BCK	MIDISMArt, USMArt	KB41	N/A
	Garage Key, MK49, X-Treme Control, TQ49, MC2	KB42	KC2
Casio	MIDI Master Plus, MIDI Plus, MIDI Pro, MIDI Composer, MIDI Start, MIDI Studio 2, MIDI Control 2, MK61, Pro 61, MIDI Plus 61, 61U	KB43	KC3
	GZ5, KS01, LK6, MA150, ML1, ML2, M80/300, SA1/2/5/6/8/10/11/40, SK60,	KB44S	KC4
	MA100/101/120/130/150/201/220, PA31/81/480, RAP1, SA20/21/35/38/39/45/67/75, SK60/65, TA10, VA10	KB41	N/A
	CA100/110, CT380/395, CTK50/100/120/150/200/230, DM100, MT640, MT740, SA65	KB42	KC2
	CTK80/451/491/496/519/541/551/571/560L/573/591/611/620L/651/671/680/691/700/710/731/800/900 LK30/35/43/45/50/55/60/65/70S/90TV/93TV/100/200S/300TV	KB43	KC3
	CTK450, MT750	KB44	KC4
	CPS120, CTK560L/620L/631/731/750/1000	KB44S	KC4
	CT450/460/625/6000, HT3000/6000, VZ1	KB45	KC5
	CK30, CTK711EX/811EX, HTX1050, LK73/80, MZ2000, WK1200/1300/1350	KB46	KC6
	CPS7 CTK930, WK1500	KB46S	KC6
	CPS50S/700/720, WK1600, WK1630, WK1800, WK3000, WK3200, WK3300, WK3800, WK3500, WK3700	KB47	KC7
	PL40R, PS20, PX100/110LB/110DK/300/300L/310/410R/500L/700, WK8000ST	KB48S	KC8
AP21/24/33/38/45/80R, CPS80S/85, PX400R	KB48	KC8	
Edirol	PC160A, PCR-A30, PCR-M30, PCR30	KB42	KC2
	PC180A, PC300, PC70, PCR-M50, PCR50, SK500	KB43	KC3
	PCR80, PCRM80	KB45S	KC5
Fatar	STU49, SL161 PRO, TMK49	KB43	KC3
	SL880, SL990, STU110, STU2001, STU90+, STU900, SL990XP, VMK188	KB48S	KC8
Kawai	CN270	KB48	KC8
	CL20, SLB110, ES1/3/4/5, L1, MP4	KB48S	KC8
Ketron	Ketron X1, XD9, SD1, SD5, Vega	KB46	KC6
Korg	Prophecy, K49	KB43	KC3
	MS2000, Control 49, MS2000B, K61, Radius, X50	KB44	KC4
	X5, X5D,	KB44S	KC4
	PA50	KB45	KC5
	Triton LE61, i5S, X3, M1, 01W, T3, T3EX, WS, Waveslation ES, N5, Triton, TR61	KB45S	KC5
	CX3, iS35/40/50, PA1X/60/80, Triton Studio 61	KB46	KC6
	i3, i30, Karma, Trinity, Trinity Plus, Trinity V3, iX300, N364, Z1, Triton Extreme 61, PA800	KB46S	KC6
	Triton Pro, 01 WPRO, Triton LE76, TR76, T2EX	KB47S	KC7
	C3200/6500, EC120/150/350, SGPROX, SG1D, SP250, N1, Triton Studio 76, PA1X Pro	KB48	KC8
	i2, X2, Trinity Pro, Trinity V3 Pro, N264, SP100/200/300/500, , Triton Extreme 76	KB48S	KC8
M-Audio	Ozone, Oxygen 8, E-Keys	KB42	KC2
	Axiom 49, Keystation 49E, Radium 49, Ozonic, Oxygen 49	KB43	KC3
	Oxygen 61, Axiom 61	KB44	KC4
	Radium 61	KB44S	KC4
Novation	Remote SL37, Remote 49, X Station 49,	KB43	KC3
	Remote SL61, X Station 61, KS4	KB44	KC4
Roland	C180, E15/16/28/35/400R, EM10/15/20/25/150R, EP3/5, JP8000, JV30, JX3P, SK50, EG101, SH201, VP550	KB44	KC4
	E100, EM30/50/55/550R, JD800, VA3, V Synth	KB45	KC5
	E09/12/14/20/36/38/50/66/68/300, EXR3/3S/5S/7S/40R, Fantom S/X/6XA, GW7, Juno D/G, JV35/50/80, JW50, JX1/305, RS5/50/70, XPI0/30/50/60	KB45S	KC5
	E56/70/86/96/500/600, EM2000, EP75/76/760, G600, KR33/55, RD200, Vima RK100	KB46	KC6
	EP7/77, EP7-llc, VK7/8	KB46S	KC6
	Discover 5, E60/80, G800/1000, EXR7, EXR7S, FA76, Fantom, Fantom X7, KR100/500, RD250, VA5, VA7, VA76	KB47	KC7
	A30/33/37/50/70, D70, JV90/1000, XP80	KB47S	KC7
	EP9e/85/97, FP1/8/9, G70, KR350/650, KF7/90, MP500BW, RD600/700/700SX, VR760	KB48	KC8
	A80, F30/30E/50/90/100, FP2/3/5, RD100/150/170	KB48S	KC8
	KC200, KC211, KC600, KC611, KN300/470/500/550/570/650/700/750, MB100	KB44	KC4
Technics	KN700/720/770/920/930/1000/1200/1400/1500/1600/2000/2400/2600/3000/3500/5000/6000/6500	KB45	KC5
	KN501/600/701/800/901/MVA1	KB45S	KC5
	KN7000	KB46	KC6
	PR100, PR110	KB47	KC7
	PC8/12/25/26, PX201M.	KB48	KC8
	P30, P50, SP30	KB48S	KC8
Yamaha	PSS6/9/11/20/50/101/102	KB41	N/A
	PSS12/14/15/16/21/26/190/280/290/390, CBX-K1	KB42	KC2
	PSR2/3/6/8/16/73/74/75/125, PSS31/680/760/780/790/795, CBX-K2	KB43	KC3
	AN1X, CS1X/2X, DJX,EZAG/20/30/150/250, PSR160/170/172/175/195/202/225GM/206/215/220/225/270/273/275/280/290/292/293/295/340/350/410/420/540/630/	KB44	KC4
	PSR640/730/740/1000/1500/2000/3000A10000K1, PSRA300, PSRE203/303/403, PSRS500, YPT200/300	KB44	KC4
	PSR767/100/110, DX21, SO3/3SL	KB44S	KC4
	CS6X, ES6, PSR1100/2100/4000/7000/8000, MO6, MOTIV6, MOTIV S30, SY77/85	KB45	KC5
	DSR500/1000/2000/3000, DX7, PSR28, V50	KB45S	KC5
	DGX200/202/220/300/305/203, PSR6000, PSR9000, QS300, W7, YPP50/100, EX7, Tyros, Tyros 2, YFP70	KB46	KC6
	CLP152S, CP300, DGX205, EX5, PDP100, MOTIV7, PSR2500/3500/4500/4600/6700/9000PRO/PSRGX76, MOTIV ES7, SY99, YPP45/55, YPR50,	KB47	KC7
	CLP80/153S, DGX500/505/520/620, PFP100, PFR85, P150/200/250/300, PDP400, MO8, S80/90, SO8, W5, YDP113/123/131/131C/151/151C/223, YPP200	KB48	KC8
	CP33, P6060S/7070S/8090/120120S/140140S	KB48S	KC8

KB41	KB42	KB43	KB44	KB44S	KB45	KB45S
498 x 220 x 64	684 x 252 x 84	878 x 287 x 113	973 x 398 x 170	939 x 292 x 100	1060 x 448 x 178	1060 x 356 x 123
19.6 x 8.7 x 2.5	26.9 x 9.9 x 3.3	34.6 x 11.3 x 4.4	38.3 x 15.7 x 6.7	37 x 11.5 x 3.9	41.7 x 17.6 x 7	41.7 x 14 x 4.8

KB46	KB46S	KB47	KB47S	KB48	KB48S	L x D x H
1175 x 430 x 200	1161 x 350 x 126	1267 x 472 x 176	1267 x 350 x 116	1385 x 470 x 176	1385 x 354 x 126	Millimetres
46.2 x 16.9 x 7.9	45.7 x 13.7 x 5.0	49.9 x 18.6 x 6.9	49.9 x 13.7 x 4.5	54.5 x 18.5 x 6.9	54.5 x 13.9 x 4.9	Inches

KC2	KC3	KC4	KC5	KC6	KC7	KC8	L x Min/Max x H
684 x 170/252 x 35	878 x 253/287x 40	973 x 266/398 x 60	1060x279/448x 60	1175x303/430x 60	1267x270/472x 60	1385x338/470 x 60	Millimetres
26.9 x 6.7/9.9 x 1.4	34.6 x 10/11.3 x 1.6	38.9x10.5/15.9x2.4	41.7 x 11/17.6 x 2.4	46.2 x 12/16.9 x 2.4	49.9x10.6/18.6x2.4	54.5x13.3/18.5x2.4	Inches

Dimensions show: Length of Keycover x Minimum/Maximum front to back x Keycover drop from top

For guidance only. All dimensions are approximate. The manufacturer regrets that no responsibility can be accepted for loss or disputes arising from the use of this guide. E.&O.E.